



SAFECRAFT 5005 Safety Harness Installation Guide


The SAFECRAFT 5005 Safety Harness is designed with many features to aid the ease of usage: from our innovative pull-down tang-adjuster, state-of-the-art aluminum adjusters, and advanced webbing. Each harness is hand-assembled in the USA by craftsman, with attention to detail. For detailed descriptions and installation tips, please visit our website at www.safecraftracing.com.

It is essential that all 2-inch belts be installed correctly. This applies to lap belts, shoulder belts and sub belts.


Please follow the instructions, which shows how to lock the webbing into the “three bar adjusters”.

Do not allow any ID tags (SFI, FIA or Warning) to be left threaded into the “three bar adjusters”. Make sure that all ID tags pass completely through the adjusters.


2-INCH BELTS DO NOT REQUIRE THAT THE WEBBING BE FOLDED TO GO THROUGH A BOLT PLATE OR WRAP AROUND A BAR.

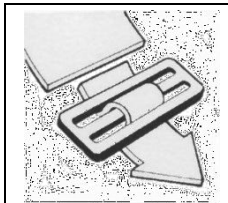


Step 1:
Insert webbing
through the 3-bar
adjuster.

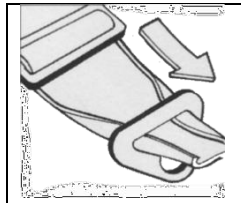

Step 2:
Pull webbing to 8-10
inches beyond
adjuster and insert
into mount
brackets.

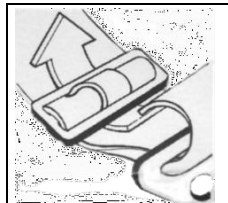

Step 3:
Fold back webbing
and re-insert through
the 3-bar adjuster as
shown.

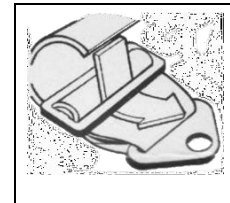

Step 4:
Fold back webbing
again and insert
through bottom
portion of buckle.

Please refer to www.sfi-foundation.com for the most up-to-date Safety Harness Installation Guidelines.

For any questions or assistance, please call (+1)813-758-3571 OR Contact us at info@safecraftracing.com.