



SAFECRAFT 5010 FIA Safety Harness Installation Guide

The SAFECRAFT 5010 FIA Safety Harness is designed with many features to aid the ease of usage; from our innovative pull-down tang-adjuster, state-of-the-art aluminum adjusters, and advanced webbing. Each harness is hand-assembled in the USA by craftsman, with attention to detail. For detailed descriptions and installation tips, please visit our website at www.safecraftracing.com.


Please refer to the installation instructions using Article 253 of FIA 8853/98 Safety Harness Installation Guidelines: http://www.FIA.com/sites/default/files/253_2016.pdf

It is essential that all 2 and 3 inch belts be installed correctly. This applies to lap belts, shoulder belts and sub belts.


Please follow the instructions, which shows how to lock the webbing into the “three bar adjusters”.

Do not allow any ID tags (SFI, FIA or Warning) to be left threaded into the “three bar adjusters”. Make sure the all ID tags pass completely through the adjusters.


2 INCH BELTS DO NOT REQUIRE THAT THE WEBBING BE FOLDED TO GO THROUGH A BOLT PLATE OR WRAP AROUND A BAR.

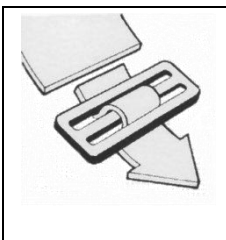


Step 1:
Insert webbing
through the 3 bar
adjuster.

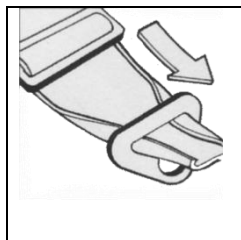

Step 2:
Pull webbing to 8-10
inches beyond
adjuster, fold edges
(3 inch webbing) and
insert into mount
brackets.

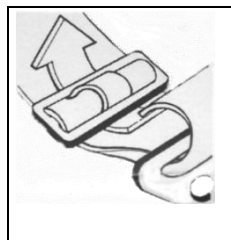

Step 3:
Fold back webbing
and re-insert through
the 3 bar adjuster as
shown.

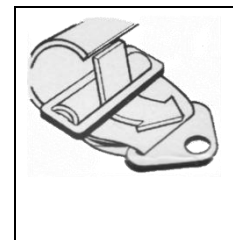

Step 4:
Fold back webbing
again and insert
through bottom
portion of buckle.

For any questions or assistance, please call (+1)813-758-3571 OR Contact us at info@safecraftracing.com.